BERNINA®

Instruction Manual & Sewing Manual





Made in Switzerland

1

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical machine, basic safety precautions should always be followed, including the following.

Read all instructions before using this sewing machine.

When the machine is not in use, it should be disconnected from the electricity supply by removing the plug from the outlet.

DANGER

To reduce the risk of electric shock:

- A machine should never be left unattended when plugged in.
- Always unplug this machine from the electric outlet immediately after using and before cleaning.
- 3. Always unplug before replacing light bulb. Replace the bulb with the same type rated 12 volts/5 watts.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Do not allow to be used as a toy. Close attention is necessary when this machine is used by or near children.
- 2. Use machine only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
- 3. Never operate this machine if
 - · it has a damaged cord or plug
 - · it is not working properly
 - · it has been dropped or damaged
 - · it has fallen into water

Return the machine to the nearest authorized **BERNINA** dealer or service center for examination, repair, electrical or mechanical adjustment.

- Never operate the machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from accumulation of lint, dust and loose cloth.
- Keep fingers away from all moving parts. Special care is required around the sewing needle.
- Always use the BERNINA original needle plate. The wrong plate can cause the needle to break.
- 7. Do not use bent needles.

- 8.Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
- 9.Turn power switch to «0» when making any adjustments in the needle area, such as threading or changing the needle, threading the bobbin or changing the presser foot.
- 10. Always unplug the sewing machine from the electrical outlet when removing covers, lubricating or when making any other user servicing adjustments mentioned in this instruction manual.
- 11. Never drop or insert any object into any opening.
- 12. Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 14. Before disconnecting, turn all controls to the off («0») position then remove the plug from the outlet.
- 15. Do not unplug by pulling on the cord but grasp the plug.
- 16. No responsibility will be taken for any possible damage as the result of misuse of the machine.
- 17. This machine is provided with double insulation.
 Use only identical replacement parts. See instructions for Servicing of Double-Insulated machines.

SERVICING DOUBLE-INSULATED PRODUCTS

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system and should only be done by qualified service personnel. Replacement parts for a double-insulated product must be identical to those parts in the product. A double insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED".

The symbol may also be marked on the product.

SAVE THESE INSTRUCTIONS!

This sewing machine is intended for household use only.

BERNINA®



"Welcome to

Choosing BERNINA is a decision which will have a positive impact on your sewing for years to come. Customer satisfaction has been the driving force of our family company for over 100 years and I intend to continue that tradition of delivering superb Swiss quality, future-oriented sewing technology and unparalleled customer service.

The new BERNINA family of creative sewing machines gives you the unique opportunity to select a la carte what you need to satisfy your sewing needs and requirements.

In addition a wide range of sewing accessories together with supportive educational publications full of practical and creative ideas add to the joy of sewing the BERNINA WAY.

the BERNINA

It gives me great pleasure to welcome you into the BERNINA family.

family"

#. P. June L.

H. P. Ueltschi Owner BERNINA Sewing Machine Company

Fritz Gegauf Ltd. · BERNINA Sewing Machines · CH-8266 Steckborn / Switzerland

Setting up the machine



Operating instructions



Stitches Presser feet



Needle and thread Fabric feed




Cleaning Maintenance Trouble shooting







4

Details of the machine

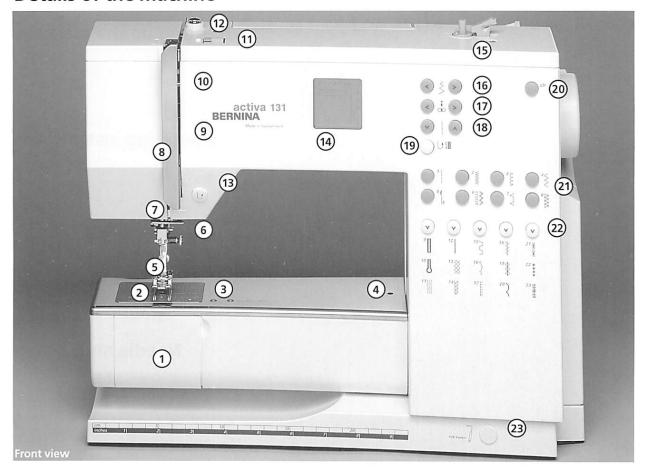


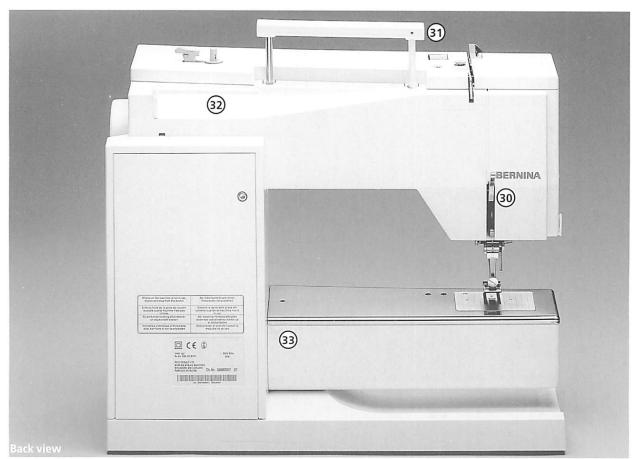



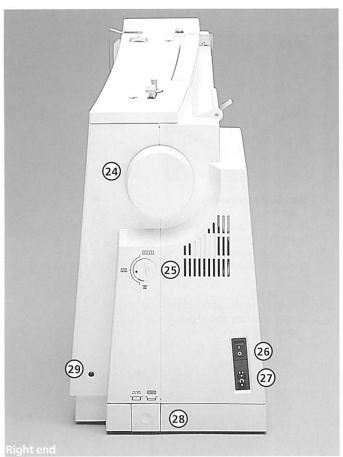

- 1 Bobbin cover
- 2 Stitch plate
- 3 Attachment base
- 4 Darning ring fixation hole
- 5 Presser foot
- 6 Needle clamp
- 7 Thread guide
- 8 Thread take-up cover
- 9 Thread slit
- 10 Thread take-up
- 11 Tension adjustment wheel
- 12 Bobbin pre-tension
- 13 Quick reverse button
- 14 Screen
- 15 Bobbin winder with on/off switch and thread cutter
- 16 Stitch width
- 17 Needle position
- 18 Stitch length
- 19 Continuous reverse Stitch counter buttonhole selector
- 20 clr button
- 21 Stitch selection
- 22 Stitch group selection
- 23 FHS Presser foot lifter fixation hole
- 24 Handwheel
- 25 Balance
- 26 On/off power switch
- 27 Plug socket
- 28 Drop feed dog
- 29 Foot control socket
- 30 Presser foot lifter
- 31 Carrying handle
- 32 Spool pins
- 33 Sewing table socket
- 34 Thread cutter
- 35 Presser foot pressure

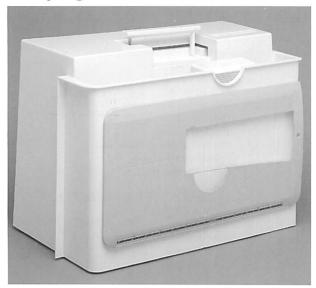

Carrying case

- · protects machine from dust and dirt
- · compartment for accessories

Accessories

- · foot control
- · instruction manual
- · power cable
- · warranty card
- · presser foot lifter*
- · sewing table* (attached)

 To remove the sewing table, lift slightly and remove.
- *Available as special accessory for activa 130, 140



To remove the case

- · grasp both sides
- · pull off vertically

Note

The separate spool pin must be removed to put the case on.

Accessory box



Enlarges the sewing surface

 To open, lower the cover to the back



To remove

 pull the box to the left to work in free-arm mode

To attach

 push the box to the right until it engages

Note:

To remove the box, the hinged bobbin case cover on the free-arm must be closed.



Standard accessories:

5 bobbins
Needle selection 140/705H
Seam ripper
Small screwdriver
Special screwdriver
Brush
Seam guide
Height compensating plates
Supplementary spool pin
3 spool discs

Power cable



The power cable is stored in the case

- · plug A into machine
- · plug B into wall socket

Foot control cable

· plug C into machine

Important! (USA/Canada only)

This sewing machine has a polarized plug (one blade wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrican to install the proper outlet. Do not modify the plug in any way.

Foot control




The foot control regulates the sewing speed

raise or lower the needle by tapping on the foot control with your heel

Important!

(USA/Canada only) Use only foot controller type LV1 or LV2 with sewing machines activa 130, 131 and 140PE.

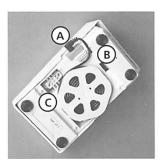

Self storing cord

- · wind the cord on the reel
- · insert the plug into A

When sewing

· slip the cable unwound to the desired length in B or C

Power switch



The switch is on the handwheel side of the machine

- 1 the machine is switched on
- 0 the machine is switched off

The sewing light is switched on and off with the power switch

Refer to the safety instructions!

Sewing table*



Increases the sewing surface

To attach

 place over the free arm and press firmly so that it engages on the fixing cam

To remove

- · pull to the left
- · remove

Seam guide

- insert into the groove (underside of table) from the right
- it can be freely adjusted over the whole width of the table

Scale

- number "0" corresponds to the centre needle position
- * Available as a special accessory for activa 130, 131

FHS (Free Hand System) presser foot lifter*



The presser foot lifter raises and lowers the presser foot

Push to the right

- the presser foot is raised the feed-dog is lowered simultaneously
- the feed-dog is raised as soon as the first stitch is sewn

Attaching the presser foot lifter

The presser foot lifter is stored in the case


insert the presser foot lifter into the opening in the base plate


You should be able to operate the lifter with your knee in your normal sitting position


Note:

Your dealer can adjust it if necessary.

* Available as a special accessory for activa 130, 131, and 140PE

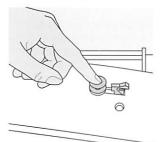

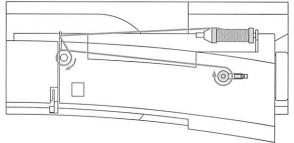

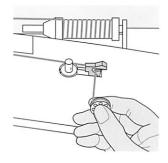


Winding the bobbin

- · turn power switch on
- · place empty bobbin on spindle
- · following the direction of the arrow take thread through the rear guide and round the pre-tension stud · wind it several times round the empty bobbin
- · press the engaging lever against the bobbin
- · press the foot control
- · the motor will stop automatically when the bobbin is
- · remove the bobbin


· cut the thread on the thread cutter

Bobbin case

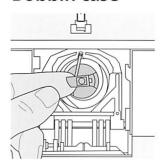


To remove

- · raise the needle
- · turn power switch to 0
- · open the accessory box cover
- · open the bobbin cover
- · grasp the latch of the bobbin case
- · remove case

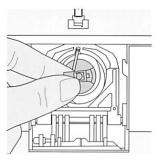

To insert

- · hold the bobbin case latch
- · the finger on the case should point upwards
- · insert so that it engages until it clicks
- · close the bobbin cover
- · close the accessory box cover

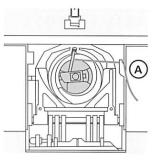

Bobbin thread cutter


- · insert the bobbin case
- · take thread over cutter A
- · thread is cut

Refer to the safety instructions!

Note:

The bobbin thread does not have to be brought up as the loose end is just the right length to start sewing.


Inserting the bobbin

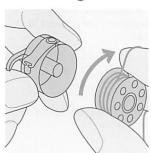


Insert the bobbin so that the thread runs clockwise.



Pull the thread counter clockwise into the slot.

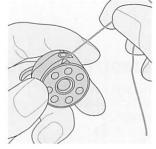


Pull the thread to the left under the spring until it lies in the T-shaped slit at the end of the spring.

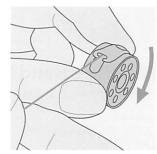

The bobbin must turn clockwise when thread is pulled.

Changing the needle

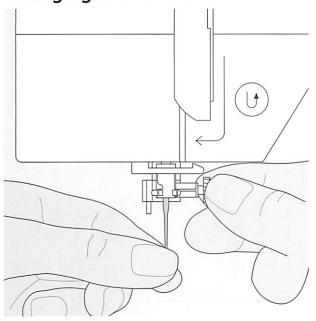

Removing the needle


- · raise the needle
- · turn power switch to 0
- · remove the presser foot
- · loosen the needle clamp screw
- · pull the needle down to remove

Inserting the needle

- · flat side of needle to the back
- · insert the needle as far as it will go
- · tighten the needle clamp


Refer to the safety instructions!

Changing the presser foot

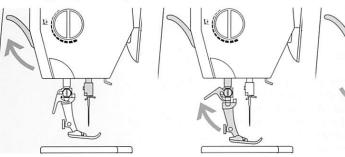

Presser foot with shank


- raise the needle and presser foot
- · turn power switch to 0
- · raise the clamping lever · remove the presser foot

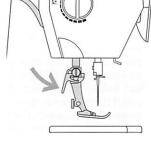

Attaching the presser foot


- guide the foot upwards over the cone
- press the clamping lever down

Supplementary spool pin

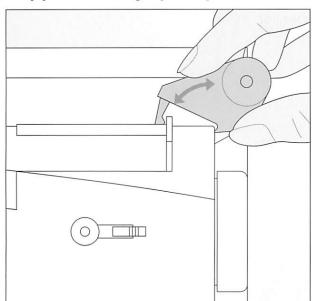


Vertical spool pin

- the supplementary (vertical) spool pin is stored with the accessories
- · push it from right to left in the opening provided
- · pull it to the right to remove
- · essential when sewing with more than one thread, e.g. for double needle work

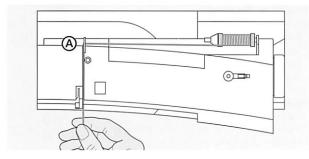


- · raise the needle and presser foot
- · turn the power switch to 0
- · place spool on pin and attach the appropriate spool disc - diameter of spool = disc size
- · take thread through rear guide A
- then into slit of upper thread tension
- · pull thread down to the right of the take-up cover to B
- · then up to the left of the cover to C
- · and down through guides D and E

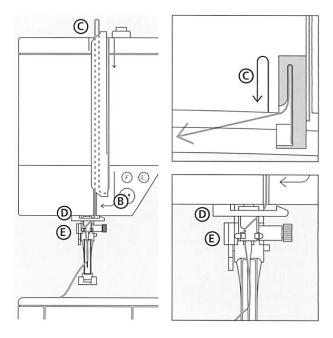

Refer to the safety instructions!


Bringing up the lower thread

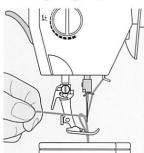

- · hold the upper thread
- sew one stitch
- · pull the upper thread until the bobbin thread appears in the stitch plate hole
- pull bobbin thread out of the hole and insert both threads through the slit in the presser foot towards the back
- · pull threads over the cutter (34)




Thread cutter

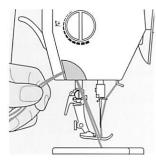

- · pull both threads from front to back over the cutter
- the threads release as soon as the first stitch is sewn


Stitch plate

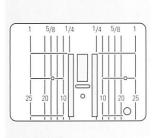

Stitch plate markings

- the stitch plate is marked with seam guide lines in mm and inches
- · the millimetre markings are at the front
- · the inch markings are at the back
- the measurements indicate the distance from the needle to the lines
- the needle insertion point is 0 (= needle position centre)
- · lines are provided to the right and left of the needle
- they are very useful guide lines for precise seaming
- the horizontal lines are useful for buttonholes, etc.

Thread tension

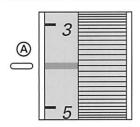

Basic settings

- the basic setting is indicated when the red line on the tension adjustment wheel is in line with the marking A
- the tension does not need adjusting for normal sewing work
- for special sewing work, the tension can be adjusted to suit the fabric

The tension can react differently when sewing with unusual threads and it is necessary to adjust the tension and select a needle which suits the thread.

For example:

	Tension	Needle
Metallic thread	approx. 3	90
Monofilament	approx. 2–4	80


To reduce the tension

· Turn to between 3 and 1

To increase the tension

· Turn to between 5 and 10

Feed-dog

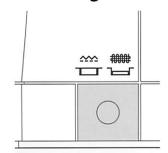


Button flush with base plate = sewing position

Button depressed = feed-dog is lowered


for free-hand sewing (darning, embroidery, etc.)

General Instructions

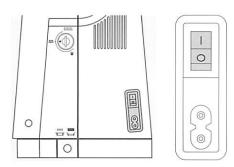


Main switch to 1

· The machine is ready to sew

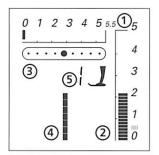

The screen shows

- 1 stitch width basic setting blinks constantly
- 2 stitch length basic setting blinks constantly
- 3 needle position (9 positions)
- 4 stitch number 1 (straight stitch)
- 5 presser foot indicator (1 for straight stitch)

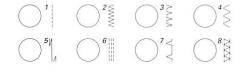

Stitch selection

· press the appropriate button - the number and basic stitch length and width settings appear on the screen



· These buttons are to select vertically arranged stitches



Stitch width

- · left button narrow the zig-zag
- · right button widen the zig-zag



Needle position

- · left button needle to the left
- · right button needle to the right



Stitch length

- · left button shorten the length
- · right button elongate the length



clr button

- deletes altered basic settings
- · deletes selected functions exceptions:

altered basic settings for buttonhole

Functions

Functions are **activated** when the symbol appears on the screen.

Functions are **deactivated** when the symbols no longer appear on the screen.



Continuous reverse/stitch counter buttonhole selector

- · machines sews permanently in reverse
- also serves as the stitch counter buttonhole selector when the buttonhole menu is open



Quick reverse

- $\cdot \ \text{for programming buttonholes} \\$
- · for programming darning
- · conversion from sewing to securing program
- · manual securing for seam beginning and ending



clr/del


 clears functions such as basic settings, stitch length, stitch width, needle positions

Exceptions: altered basic settings for buttonholes, continuous reverse

Altered stitch memory

- in the altered stitch memory, alterations to the stitch width, length and needle position can be made for all stitches
- individual stitches can be reverted to basic settings using clr/del
- all altered settings in altered stitch memory are lost when the machine is switched off


Buttonholes

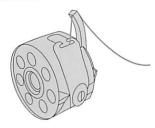

The sequence is the same for all buttonholes

Preparation

- thread the lower thread in the finger of the bobbin case
- · use Buttonhole foot No. 3

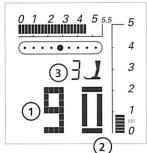

Sewing buttonholes

- Select the buttonhole Screen shows
- 1 Buttonhole number
- 2 Buttonhole symbol
- 3 Presser foot

Both beads are sewn in the same direction.

Preparation:

- · Buttonhole foot no. 3
- · darning or sewing thread
- · insert the lower thread in the finger of the bobbin case

Always test sew buttonholes

- · test on the fabric and stabilizer you intend to use
- · sew buttonholes in the same grain direction (with or against)

The individual steps blink on the screen

- 1. sew the first bead forward, stop the machine
 - press the quick reverse button
- 2. sew reverse straight stitch, stop the machine at the first stitch (buttonhole begin)
 - · press the quick reverse button
- 3. sew the bar tack and the second bead, stop the machine
- press the quick reverse button
- 4. sew the bar tack and the securing stitches

3

Manual multiple-step keyhole buttonhole

The individual steps blink on the screen. Sew both forward and reverse beads at the same speed.



- 3
- 1. sew the straight stitch forward, stopping the machine at desired
 - · press the quick reverse button
- sew the eye and the bead stopping at beginning of buttonhole press the quick reverse button
- 3. sew straight stitch forward to the keyhole
 - · press the quick reverse button
- 4. sew second bead in reverse stopping at beginning of buttonhole press the quick reverse button
- 5. sew bartack and securing stitches

Manual multiple-step buttonhole (all types)

Manual buttonholes are particularly suitable for single buttonholes or for repairing existing buttonholes.

Individual steps can be eliminated or repeated. The number of steps corresponds to the buttonhole type. Manual buttonholes cannot be

Stitch counter buttonholes

The first bead is sewn forward, the second bead backwards. Sew forward and reverse beads at the same speed.

Preparation:

- Buttonhole foot No. 3
- darning or sewing thread
- · insert the lower thread into the finger of the bobbin case

Always test sew buttonholes

- · test on the fabric and stabilizer you intend to use
- · sew buttonholes in the same grain direction (with or against)



Programmed buttonholes on other fabrics

- the appearance of a programmed stitch counter buttonhole can vary on different types of fabric
- · re-program on the fabric you wish to use!

Corrections

- the buttonhole must be reprogrammed after altering the stitch length, width or balance
- · test sewing on the new fabric is recommended

Perfect buttonholes

- · sew all the buttonholes at the same speed to keep the beads even
- · sew at medium speed



Select buttonhole

Press the continuous reverse button (stitch counter buttonhole selector)

The individual steps blink on the screen

- 1. sew the first bead, stop machine, press the quick reverse button
- 2. sew the bottom bar tack (eye) and the second bead in reverse
 - · stop machine at the first stitch (buttonhole begin)
 - press the quick reverse button
- 3. sew the top bar tack and securing stitches
 - · machine stops automatically
 - · AUTO appears
 - · the buttonhole is now programmed
 - · all subsequent buttonholes will be sewn as programmed
 - · the machine stops automatically at the end of each buttonhole

Press the clr/del button to delete the programme.


Corrections

Stitch length

- any changes to the stitch length affect both beads (denser or less dense)
- · if the stitch length has been altered, reprogramme the buttonhole
- · alterations to the stitch width or length cannot be cleared with the clr/del button

Return to basic settings

- · alter manually
- · select the stitch and press the buttonhole button several times

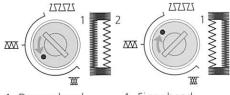

- 1. Denser bead
- 2. Finer bead
- 1. Finer bead
- 2. Denser bead

2 Balance

- any alterations to the balance affect both beads (stitch counter buttenholes)
- · if you alter the bead density with balance, delete the programmed buttonhole with the clr/del button and reprogramme the buttonhole with the new balance settings
- any balance alterations to the 6-step manual and auto length buttonholes affects both beads identically because they are sewn in the same direction

Note

When all buttonholes have been sewn, return balance to the normal setting


Note:

If the balance has been

sewing is completed.


adjusted, return it to the normal setting once

Balance

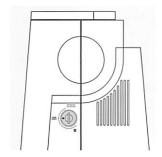


Balance

For balancing forward and reverse sewn stitches and for fine stitch length adjustments.

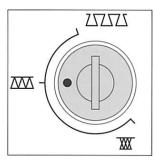

Normal position

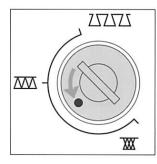

Denser stitch formation (shorter stitch length)




Finer stitch formation (longer stitch length)


Applications:

Practical stitches, e.g. Honeycomb stitch on jersey, decorative stitches, buttonholes

Presser foot pressure

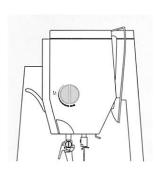


Pressure adjustment left end of machine

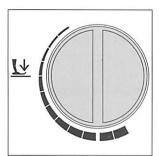


Standard pressure

· for normal sewing work

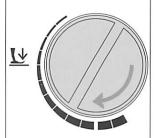

Reduced pressure

- for jerseys and loose knits
- to prevent fabric stretching
- adjust pressure so that the fabric still feeds correctly

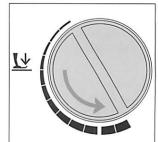

Increased pressure

 slippery, light weight fabrics improves fabric feed

Stitch selection		a	ctiva 130		
			1	Straight stitch	All non-stretch fabrics. All straight stitch work.
1	2 ₩	³ ≥ >	2	Zig-zag	Most fabric types. All simple zig-zag such as oversewin fine fabrics. Sewing on elastic and lace.
			3	Vari-overlock	Primarily for fine jerseys, stretch overlock seams and hems.
			4	Running stitch	Most types of fabric. Mending, patching, reinforcing seams.
4 ≤	5 y 1		5	Securing stitch	All types of fabric. Secures the beginning and end of seams sewn with straight stitch
			6	Triple straight and triple zig-zag	Reinforced seams in tough, heavy fabrics.
			7	Blind stitch	Most types of fabric. Blind hems, shell edging on soft jerseys and fine fabrics, decorative seams.
⁷	8 WW		8	Double overlock	All types of knit. Overlock = sew and neaten in one operation
			De	ecoration stitches 11–13	
			9	Standard buttonhole	Fine to medium weight woven fabrics. Blouses, shirts, trousers, bedlinens, etc.
⁹ ∏	10		10	Darning program	Automatic darning for fine and medium weight fabrics

Stitch selection		ction	activa 131	
			1 Straight stitch	All non-stretch fabrics. All straight stitch work.
1	2 **	<i>3</i> ≥	2 Zig-zag	Most fabric types. All simple zig-zag such as oversewing fine fabrics. Sewing on elastic and lace.
i		>	3 Vari-overlock	Primarily for fine jerseys, stretch overlock seams and hems.
			4 Running stitch	Most types of fabric. Mending, patching, reinforcing seams.
4 ≤	5γ //		5 Securing programme	For non stretch fabrics; for securing the beginning and end of seams with straight stitch
			6 Triple straight and triple zig-zag	Reinforced seams in tough, heavy fabrics.
7 1	_	10.7	7 Blind stitch	Most types of fabric. Blind hems, shell edging on soft jerseys and fine fabrics, decorative seams.
' \{	8 XXXX	12	8 Double overlock	All types of knit. Overlock = sew and neaten in one operation
			12 Super stretch	Open seam for all super stretch fabrics.
12 ^/		45.1	13 Honeycomb stitch	Most types of interlock and smooth fabrics. Visible seams and hems.
13 🔆	14	15	14 Jersey stitch	Natural, blended or synthetic fabrics and delicate knits. Visible seams and hems. Mending jersey/interlock.
	,	1	15 Universal stitch	Firm fabrics such as felt and leather. Flat joining seams, visible seams, sewing on elastic, decorative seams.
16 <			16 Gathering stitch	Most types of fabric. Gathering with shirring elastic. Butted seams = butting two pressed edges and sewing together.
			Decoration stitches 17–23	
_			9 Standard buttonhole	Fine to medium weight fabrics. Blouses, shirts, trousers, bedlinens, etc.
9	10	11	10 Keyhole buttonhole	Heavy weight, non stretch fabrics. Jackets, coats, trousers, leisure wear, etc.
_	•		11 Darning program	Automatic darning for fine and medium weight fabrics.

Stite	ch sele	ction	Patchwork Edition 140	
			1 Straight stitch	All non-stretch fabrics. All straight stitch work.
1	2 **	<i>3</i> ≥	2 Zig-zag	Most fabric types. All simple zig-zag such as oversewing fine fabrics. Sewing on elastic and lace.
1	\$	5	3 Vari-overlock	Primarily for fine jerseys, stretch overlock seams and hems
			4 Running stitch	Most types of fabric. Mending, patching, reinforcing sean
4 ≤	5 y	6 >	5 Securing programme	For non stretch fabrics; for securing the beginning and en of seams with straight stitch
			6 Triple straight and triple zig-zag	Reinforced seams in tough, heavy fabrics.
			7 Blind stitch	Most types of fabric. Blind hems, shell edging on soft jerseys and fine fabrics, decorative seams.
7	8	12 ×	8 Double overlock	All types of knit. Overlock = sew and neaten in one operation
		/	12 Honeycomb stitch	Most types of interlock and smooth fabrics. Visible seams and hems.
13			13 Gathering stitch	Most types of fabric. Gathering with shirring elastic. Butt seams = butting two pressed edges and sewing together.
'			Patchwork, Quilting and D (refer to pages 24 amd 25	
			9 Standard buttonhole	Fine to medium weight fabrics. Blouses, shirts, trousers, bedlinens, etc.
9	10	11	10 Keyhole buttonhole	Heavy weight, non stretch fabrics. Jackets, coats, trouser leisure wear, etc.
			11 Darning program	Automatic darning for fine and medium weight fabrics.

(ARE)

activa 130



Reverse pattern Buttonhole foot Practical and decorative



foot Buttonholes



Zipper foot Sewing in zips



Blind stitch foot Blind hems, edge stitching

activa 131



stitches

Reverse pattern Buttonhole Practical and decorative



foot Buttonholes



Zipper foot Sewing in zips



Blind stitch foot Overlock foot Blind hems, edge stitching



Embroidery foot

Patchwork Edition 140



stitches

Reverse pattern foot Practical and decorative stitches



Buttonhole foot Buttonholes



Zipper foot Sewing in zips



Blind stitch foot Blind hems, edge stitching



Open **Embroidery** foot




Quilting foot



37 **Patchworkfoot** 1/4 inch/6mm

Patchwork Foot #37

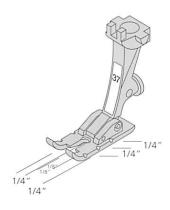

A useful accessory for any quilter, Patchwork Foot #37 makes piecing easy and accurate and is included as a standard accessory for the Patchwork Edition 140.

- · Patchwork Foot #37 is designed to be used with the needle in center position
- guide the outer edge of the foot along the edge of the fabric for accurate 1/4" seam allowances
- · using the inside of the toe as a guide gives accurate 1/8" seam allowances
- · the foot has 1/4" markings both behind and in front of the needle mark for accurate pivoting of corners
- · for optimal control of the fabric, use the Straight Stitch Plate along with Patchwork Foot #37

110-120

Quilting With BERNINA®



Along with the manual for the Patchwork Edition 140, this informative book is a standard accessory and provides detailed quilting information.

Learn the basics of piecing and quilting the BERNINA® way! This 40 page, spiralbound book includes specific directions

Needle

Darning thread

Embroidery

Mercerised

Synthetic thread

cotton thread

Thick threads,

synthetic mercerised thread

Buttonhole thread for decorative seams (cordonnet)

thread

70

0

80

0

0

O

O


for patchwork and quilting techniques using BERNINA® presser feet, machine features, and accessories. Complete with instructions for five sampler projects easy enough to the beginner, and interesting enough for the more experienced quilter.

Important facts about sewing machine needles

Sewing machine, needle and thread Your BERNINA uses needle system 130/705H.


Needle and thread

The most commonly sold needles are nos. 70-120. The finer the needle, the lower the number. The table shows which needle is suitable for which threads. The needle you use depends on the thread. The needle must be suitable for the thread.

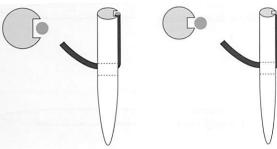


When sewing, the thread runs in the long groove on the needle.

If the needle is too fine, the groove will be too narrow for the thread and faulty stitching or thread breakage can occur.

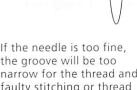


Needle and fabric Condition of needle


The needle must be in perfect condition. Problems can occur with damaged needles.

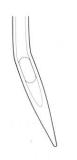



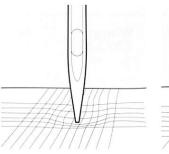

blunt needle

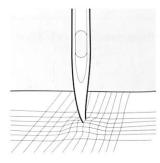

hooked needle

Important facts about sewing machine needles

Special materials are easier to sew if the appropriate needle is used.

Special needles are available at your **BERNINA** dealer.

Needle table	Description	Needle point	Suitable for	
Standard needle	130/705 H	Normal point, slightly rounded	Universal needle for woven, synthetic and natural fibers, e.g. linen, chiffon, batiste, organdie, wool, satin, decorative stitching, embroidery	
Special needles	130/705-SES	Fine ball point	Fine knits, especially for synthetic fibers	
	130/705 H-SUK	Medium ball point	Heavier knits in synthetic or natural fibers	
	130/705 H-S	Medium ball point	Special needle for delicate or difficult stretch fabrics	
	130/705 H-J	Extra fine point	Overalls, heavy linen, denim, canvas. Pierces dense fabrics easily	
	130/705 H-LR+H-LL	Cutting point	Natural and synthetic leather, plastic, coated and waxed fabric	
Double needle	130/705 H DO	Widths: 1,6 / 2,0 / 2,5 / 3,0 / 4,0	Visible hems in stretch fabrics, pintucks, decorative sewing	
Triple needle	130/705 H TRI	Widths: 2,5 / 3,0	Decorative sewing	
Hemstitch needle	130/705 H	Width: 2,0	Hemstitch in loose weaves	

-

Feed-dog and fabric feed

Feed-dog and stitch length

With each stitch the feed-dog moves forward by one step. The length of this step is determined by the stitch length selected. With an extremely short stitch length, the steps are also short. The fabric moves under the foot quite slowly, even at full sewing speed. Buttonholes, satin stitch and decorative stitches are all sewn with a very short stitch length.

Important








Let the fabric feed evenly!

Pulling or pushing will result in gaps.

Holding back will result in knots.


Feed-dog and fabric feed



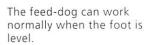




If the foot is at an angle, e.g. when sewing over thick to thin or vice-versa, the feed-dog can not grip and feed the fabric and the fabric hangs up.

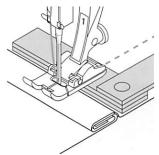


To solve this problem, place one, two or three compensating plates as required behind the needle under the presser foot.

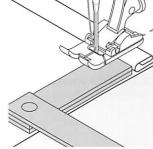


To correct the height in front of the foot, place one or more plates to the right of the foot next to the needle. Sew until the foot is level again and remove the plates.


Feed-dog and sewing corners

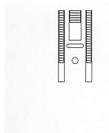

The gap between the two rows of teeth is relatively large due to the width of the stitch plate hole.

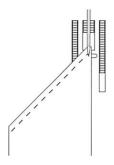



When sewing corners only a small section of the fabric is actually on the feed-dog so that it cannot grip the fabric well.

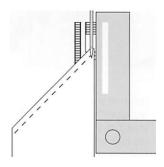

Correct this by placing one or more compensating plates as close as possible to the edge of the fabric.

If the machine is stored in a cold room, it should be brought to a warm room about one hour before use.

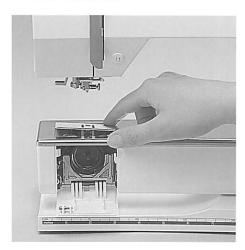

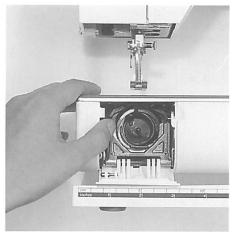

Important! Never use solvents of any kind!

Cleaning

Clean the machine after every use

- · turn power switch to 0
- · remove presser foot and needle
- · open the free-arm cover
- press the stitch plate down at back right corner
- · lift and remove it
- · clean the area with the brush
- · replace the stitch plate

Cleaning the screen and the machine

· wipe with a damp cloth

Cleaning the hook


- turn power switch to 0
- remove the bobbin case
- · push the release lever to the left
- · push the locking lever to the left and fold down the hook race cover
- · remove the hook
- · clean the hook race with a cloth or brush, never use a sharp instrument
- replace the hook, turning the handwheel if necessary so that the hook driver is on the left
- close the hook race cover and secure with the locking lever, the locking pin must engage
- · check by turning the handwheel
- · insert the bobbin case

Lubricating

This machine is equipped with a LM (low mass) hook system which requires no lubrication. If however you do lubricate any parts, always run the machine immediately afterwards on scrap material to avoid soiling your work.

Sewing light



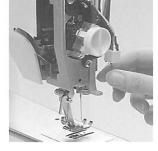

Note: Use bulb type 12 V 5 W. W 2.1 x 9.5 d. Refer to the safety instructions!

Light bulbs get hot. Allow to cool down before removal.

Replacing the bulb

- · turn power switch to 0
- · loosen the screw
- · remove the cover
- · remove the bulb
- · insert the new bulb
- replace cover and tighten screw

Trouble shooting

In most cases you will be able to identify and remedy faults by checking the following.

Check whether:

- · the upper and lower threads are threaded correctly
- the needle is inserted correctly with the flat side to the
- · the needle size is correct check the needle/thread table
- · the machine is clean brush out any thread fluff
- · the hook race is clean
- any threads are trapped between the tension discs or under the bobbin case spring

Upper thread breaks

- · The upper thread tension is too tight
- The needles are of a poor quality. Ideally needles should be purchased from your BERNINA dealer.
- The needle has been inserted incorrectly. The flat side of the shank must be to the back.
- · The needle is bent or blunt.
- Poor quality, knotted or dried out thread has been used.
- · Use the correct spool disc.
- Stitch plate or hook tip damaged. Take your machine to your BERNINA dealer.

Lower thread breaks

- · The lower thread tension is too tight.
- The bobbin is jamming in the bobbin case.
 Remove and replace the bobbin.
- The hole in the stitch plate has been damaged by the needle. This must be repolished by an expert.
- · The needle is blunt or bent.

Skipped stitches

- · Wrong needles used. Use only 130/705H system.
- The needle is blunt, bent or incorrectly inserted.
 Push right to the top when inserting.
- · Needle inserted all the way to the top.
- The needle point does not suit the fabric being sewn.
 If necessary use a ball point for knitted fabrics and cutting point for hard leather.

Needle breaks

- · Needle clamp screw loose.
- Fabric taken out in front of instead of behind the presser foot.
- When sewing over thick area, the fabric was pushed with the needle still in the fabric.
- · Poor quality thread, unevenly wound or knotted.

Faulty stitching

- · Remnants of thread between the tension discs.
- · Remnants of thread under the bobbin case spring.
- Lower thread still threaded in the bobbin case finger.
- · Incorrect threading. Check upper and lower threads.
- · Use the correct spool disc.

Machine fails to run or runs slowly

- · Plug not fully inserted.
- · Power switch in off position.
- · Machine has been standing in a cold room.
- · Bobbin winder still switched on.


Machine sews in reverse

· Reverse sewing function is still activated.

Index

<u>A</u>			F		0		<u>T</u>		
Accessory box Altered stitch men	nory	6 13	Faults Feed dogs · and fabric feed	23 11 23	Operating instructions Overlock stitch	12 17	Thread cutter Thread tension Thread		10 11
_			and presser foot	23	_		· and needle char	't	21
В			and sewing corners		P		and needles		21
D-1		40	· and stitch length	23	Databasanis Cant	20	· bringing up the	lower	
Balance	47 40	16	lowering	11 7	Patchwork Foot	20 13	thread · tension		10
Blind stitch	17, 18	, 19	Foot control	7	Personal memory Power cable	7			11
Bobbin case		8	Free-Hand System Functions	13	Power switch	7	 upper thread threading 		10
· inserting Bobbin thread		0	runctions	13	Practical stitches	17	Threader		10
· breaks		25			Presser feet	17	Triple straight		10
· bringing up		10	G		· changing	9	stitch	17, 18,	10
· inserting		8	<u> </u>		· selection	20	Triple zig-zag	17, 10,	13
· winding		8	Gathering stitch	18, 19	Presser foot display	12	stitch	17, 18,	10
Bulb		J	General operating	10, 13	Presser foot display	7	Trouble shooting	17, 10,	25
· changing		24	instructions	12	Presser foot pressure	16	mouble shooting		
Buttonholes			msa actions		resser root pressure				
· manual 4-step							U		
keyhole		14	Н		Q				
· manual 6-step		• •					Universal stitch		18
standard		14	Honeycomb stitch	18, 19	Quilting With BERNINA®	20	Upper thread		
· stitch counter		14	Hook		Quick reverse	13	breaks		25
· balance	15	, 16	· cleaning	24	•		· threading		10
					R				
С			I				V		
	_		·		Reverse sewing				
Cable		7	Index	26	· continuous	13	Vari-overlock	17, 18,	19
Cable connection		7			Running stitch 17, 18	, 19			
Carrying case		6							
Cleaning		24	J				Z		
cir/del button		13			S				
Contents		3	Jersey stitch	18			Zig-zag stitch	17, 18,	19
Continuous revers	se	13			Safety instructions	1			
Corners		23			Securing stitch	17			
			M		Sewing corners	23			
					Sewing light	24			
D	_		Maintenance	22	Sewing table	7			
					Skipped stitches	25			
Darning program					Stitch counter				
Details of the mad	hine	4, 5	N		buttonhole selector	13			
					Stitch length	12			
			Needle		Stitch width	12			
			threading	10	Stitch plate markings	11			
			and thread	21	Stitch selection 17, 18	-			
			information	22, 23	Straight stitch 17, 18	, 19			
			changing	9	Supplementary spool	_			
			Needle position	12	pin	9			
			Needle ston un/dow	n 17	Suner stretch	18			

(M)

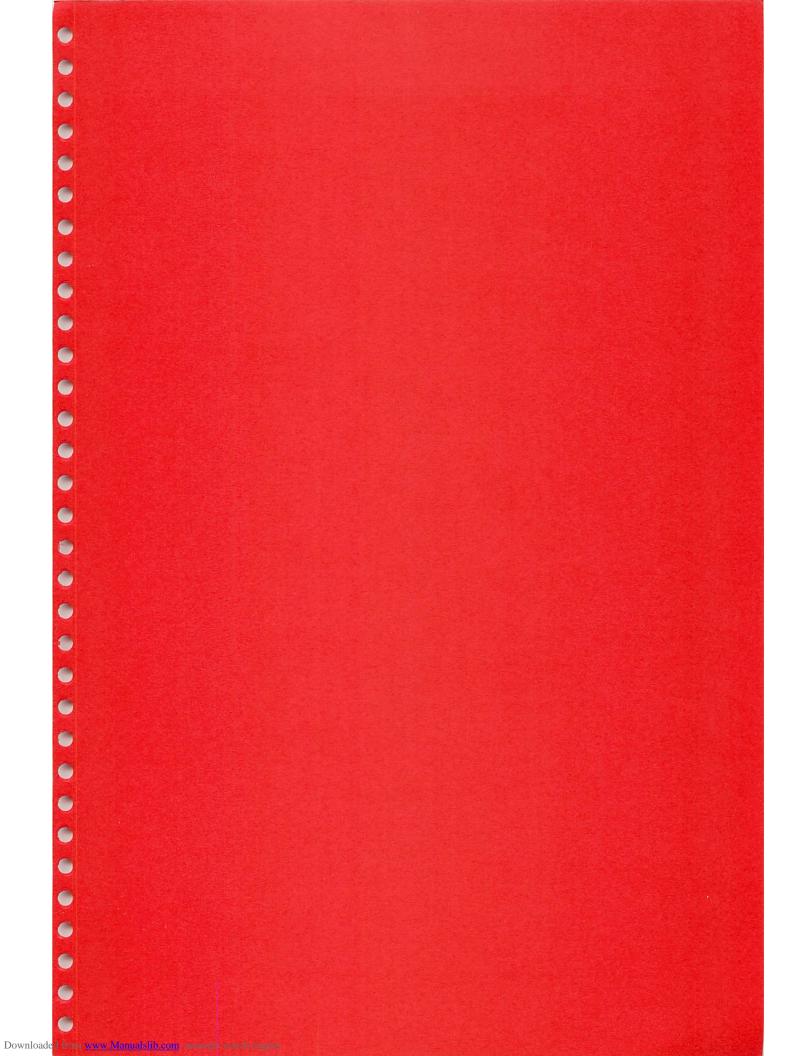



Sewing Manual BERWINA

Index

² Straight stitch

Stitch: **Straight stitch** Needle: **80/70**

Thread: machine/darning thread


Feed-dog: **sewing**


Presser foot: Reverse pattern foot no. 1

Straight stitch (A)

The machine is ready to sew as soon as you switch on

- · select straight stitch
- · presser foot display
- · basic settings (length and width) for straight stitch

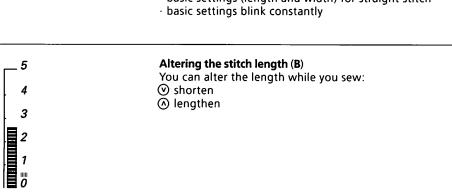

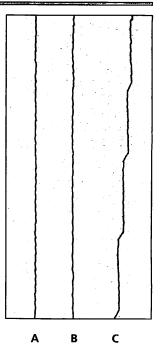

 $\overline{}$

Change the needle position (C)

- > to the right



Securing with quick reverse button (frame)

- · press the button and the machine sews in reverse
- · release the button and the machine sews forwards



TIP

Adjust the stitch length to suit the fabric:

• e.g. denim = longer stitch length (approx. 3-4)

Adjust the stitch length to suit the thread:

e.g. cordonnet for top stitching = longer stitch length (approx. 3-5)

Securing stitch (straight stitch)

Securing stitch Stitch:

Needle: 80/70

Thread: machine/darning thread

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Securing stitch

for all fabrics

secures beginning and end of seam

Stitch selection

· press the appropriate button

On-screen

- · stitch number selected
- · presser foot
- · basic settings (width and length)



Seam begin

- · machine secures seam automatically (5 stitches forward, 5 stitches reverse)
- · continue with straight stitch



Seam end

- press the quick reverse button machine secures automatically (5 stitches forward, 5 stitches reverse)
- · machine stops automatically when securing is complete





TIP

Sewing long seams

· quick and easy securing at beginning and end of seam


Edge stitching

Straight stitch Stitch: 80/90-110 Needle: machine/cordonnet Thread:

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 or Blind stitch foot no. 5

Edge stitch foot no. 10 (optional)

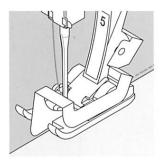

Narrow edge stitching

Needle position


- · left for outer edge
- · right for inner edge

Presser foot

· Blind stitch foot no. 5


Example Outer edge

- · place edge of fold against the guide on the foot
- · select needle position at desired distance from the edge

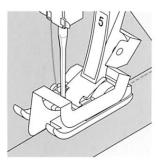

Hem edges

- · place edge of fold against the guide on the foot
- · select needle position right

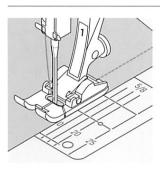

Wide edge stitching

Needle position


Presser foot

· Reverse pattern foot no. 1

At a foot's width (A)


· guide the fold along the edge of the presser foot sole

guide the folded edge along the markings on the stitch plate

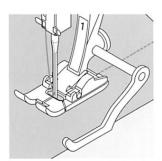

Seam guide (C)

- · insert the seam guide into the hole on the presser foot
- · adjust as desired
- guide the folded edge along the seam guide
- to sew parallel lines, guide the fabric along a previously sewn line of stitches

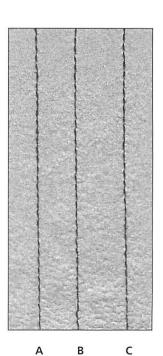





TIP

Edge stitching with seam guide

· a big help when sewing parallel lines and criss-cross

Stitch: Zig-zag Needle: 80/70 Thread:

machine/darning thread

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Zig-zag stitch

for all fabrics for neatening edges for decorative work

Stitch selection

· press the appropriate button (zig-zag)

On-screen

- · presser foot
- · basic settings (length and width)

0 1 2 3 4 5 5.5

Altering the stitch width (A)

the width can be altered while you sew

- wider
- < narrower

Altering the stitch length (B)

the length can be altered while you sew

- Shorter
- ♠ longer

Satin stitch

dense (shorter) zig-zag stitch = filled in zig-zag

Oversewing edges (C)

- · guide edge of fabric under the center of the presser
- · needle goes into fabric on one stroke and over the edge of the fabric on the next stroke
- · do not select too wide a width or too long a stitch the edge should lie flat and not roll
- · use darning thread for fine fabrics




TIP

Oversewing edges with zig-zag

· if edges roll, use Vari-overlock stitch and foot no. 2 (optional foot)

Embroidery with satin stitch

· adjust the stitch width as you sew for new effects

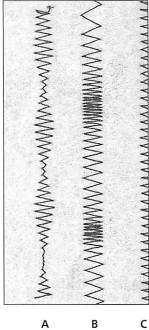

⁶ Decorative stitches

Stitch: Decorative stitch

Needle: 80/90

Thread: machine/embroidery

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Embroidery foot no. 6 (depending on the stitch) (optional)

Decorative stitches

for all fabrics, for embellishing

Stitch selection (A)

· press appropriate button

Altering the basic settings

0 1 2 3 4 5 5.5

Stitch width


wider


narrower

Stitch length (B)

Shorter

O longer

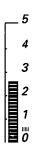

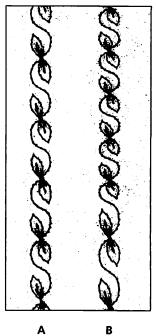



TIP

Altering the basic settings

- stitches can be adjusted to suit your own tastes, e.g. for dolls clothes, reduce the width
- the size of motifs can be adjusted to suit small items

Decorative stitches on single layer of fabric:

- · always use stabilizer underneath
- · remove after sewing is complete


Practical stitch seams

Open seams

Seams which are pressed open

- · seam allowance width as wide as wanted
- · seam lies flat
- · seam does not stretch open

Application: primarily for woven fabrics

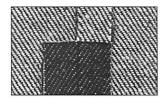


Closed seam (overlock seams)

Seams which cannot be pressed open

- · sewn and neatened in one operation
- · narrow seam allowances

Application: primarily for knits and jerseys

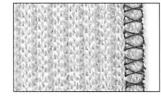



Zig-zag seam

Stitch: Zig-zag
Stitch width: approx. 1
Stitch length: Needle: 80

Thread: machine thread Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Open seam in knits and jerseys





TIP

Seam in jersey or knits waves

· reduce presser foot pressure to suit the fabric

Triple straight stitch seam



Stitch: Triple straight stitch

80/90 Needle:

Thread: machine thread


Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Open seam

strong seam for firm and densely woven fabric such as

denim and corduroy

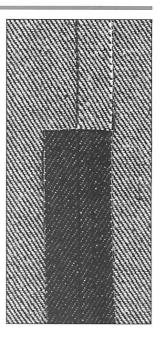



TIP

Use a Jeans needle

for densely woven fabrics

Super stretch seam

NNNNN

Stitch:

Super stretch (only activa 131)

Needle.

Thread:

machine thread

Feed-dog:

sewing


Presser foot:

Reverse pattern foot no. 1

Open seam

flexible seam for very stretchy fabrics, particularly for

sports and leisure wear

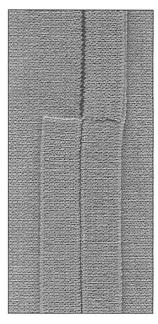



TIP

Knits and jersey

· use a new ball point needle to prevent damaging the loops

Sewing stretch fabrics

· if necessary use a stretch needle (130/705H-S) = needle point slides between the fibers

Seam in knits or jersey waves

· reduce presser foot pressure to suit the fabric

Vari-overlock seam

Stitch: Vari-overlock Needle: 80/70

Thread: machine/darning thread

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 or Overlock foot no. 2 (optional)




Closed seam

stretchy seam in fine, soft knits such as silk jersey and interlock

Sewing

· guide the raw edge along the pin on the overlock foot

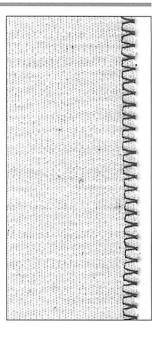



TIP

Knits and jersey

· use a new needle to prevent damaging the loops

Sewing stretch fabrics


· if necessary use a stretch needle (130/705H-S) = needle point slides between the fibers

Double overlock seam

Stitch: Double overlock
Needle: 80
Thread: machine thread

Thread: machine thread Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 or Overlock foot no. 2 (optional)

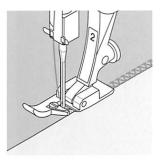


Closed seam

overlock seam in loose knits and cross seams in knits and jerseys

Sewing

 guide the raw edge along the pin on the overlock foot

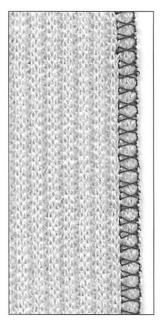



TIP

Knits and jersey

· use a new needle to prevent damaging the loops

Sewing stretch fabrics

 if necessary use a stretch needle (130/705H-S) = needle point slides between the fibers

Hems with practical stitches

Preparation

· press hem and baste if desired

Sewing

- · sew hem at desired depth (right side)
- · trim surplus fabric (wrong side)

Visible hem with Jersey stitch



Stitch: Needle: Jersey stitch (only activa 131)

80

Thread: Feed-dog: machine thread

sewing

Presser foot:

Reverse pattern foot no. 1

Visible stretch hem

for all types of cotton, wool, synthetic and mixed fiber

jersey



TIP

Knits and jersey

use a new ball point needle to prevent damaging the loops

Sewing stretch fabrics

· if necessary use a stretch needle (130/705H-S) = needle point slides between the fibers

Machines without Jersey stitch

· use Vari-overlock stitch, guide straight stitches along raw edge of hem



Visible hem with Triple zig-zag stitch



Stitch:

Triple zig-zag

Stitch width:

2.5-5 depending on fabric

Stitch length: Needle:

basic setting 80

Thread:

machine thread

Feed-dog:

sewing


Presser foot:

Reverse pattern foot no. 1

Strong visible seam

for firm, densely woven fabrics, particularly good for

denim and canvas

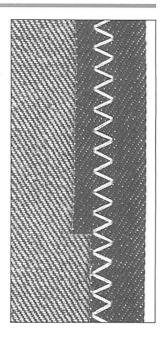



TIP

Hems on items which are to be washed frequently

· first neaten raw edges and do not trim after sewing

Sewing firm, densely woven fabrics

· use a Jeans needle

Important information

Perfect needle

blunt needles can damage knits

Use a stretch needle (130/705 H-S) if necessary

· the needle point slides between the fibers

Fine sewing thread

 coarse threads can damage knits and cause holes when the garment is washed

Darning thread for basting

· it's easier to remove when oversewn

Sewing test, when necessary

- · the elasticity of modern fabrics varies greatly
- adjust basic settings to suit the fabric; the seam should be as stretchy as the fabric
- for greater elasticity:
 use a shorter stitch length and a wider stitch width
 (only one of these adjustments may be necessary)

Presser foot pressure

- · soft, loose knits can wave when sewn:
- · reduce the pressure until the seam lies flat
- the machine must still feed the fabric properly

Self-facing with Honeycomb stitch



Stitch: Honeycomb (only activa 131 and 140PE)

Needle: 80

Thread: machine thread Feed-dog: sewing

reed-dog. **Sewing**

Presser foot: Reverse pattern foot no. 1

Self-facing with visible seam

for all cotton, wool, synthetic and mixed fiber jersey

Preparation

press 1 cm (3/8") to wrong side

Sewing

- · sew from the right at a foot's width from the edge
- trim surplus fabric (wrong side)

Balance/corrections

 Honeycomb stitch is not closed bring stitch together

= adjust balance - (subtract space between stitches)



open out stitch


= adjust balance + (add space to stitches)



TIP

Needle stop down

needle stays in fabric when you stop to adjust the ribbing

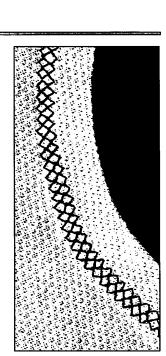


Ribbing with overlock seam

Stitch: Vari-overlock

Needle: 80

Thread: machine thread Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 or Overlock foot no. 2 (optional)

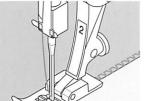

Ribbing with overlock seam


for all fine cotton, synthetic and mixed fiber jersey

Preparation

- · fold ribbing in half
- · pin and baste to opening, right side outside

Sewing

- · sew Vari-overlock over the raw edge
- · guide the edge along the pin on the foot

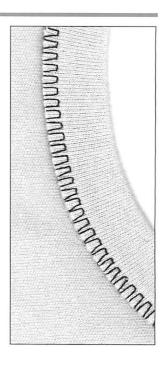



Zippers

Stitch Needle: Thread: Feed-dog: Presser foot: Needle position:

Straight stitch 80/100 machine thread sewing Zipper foot no. 4

change needle position to right or left

Preparation:

- · baste in zipper
- · fabric edges should meet over the center of the zipper

Sewing

- · sew in the zipper, each side from bottom to top
- once with needle position right and once with needle position left
- · the edge of the foot runs along the teeth of the zip
- · the needle inserts close to the teeth







TIP

To sew around zipper pull

- · close zipper and sew up to about 5 cm (2") away from the pull
- insert needle, raise the presser foot, open the zipper, lower the foot and continue to sew

Seam begin

 hold thread firmly when starting to sew = pull fabric slightly to the back (fewer stitches)

Zipper or fabric is thick or densely woven

· use a 90-100 needle for even stitch formation

Blind hem

 \leq

Stitch: Blind hem Needle: 80

Thread: machine/fine thread or lightweight thread

Feed-dog: sewing

Presser foot: Blind stitch foot no. 5

Blind hem

for invisible hems in medium to heavy cotton, wool and blended fabrics


Preparation

- · neaten raw edges
- · prepare seam as for sewing by hand
- · place work under the presser foot (see drawing)

Sewing

- the needle should just pierce the edge of the fold (same as hand sewing)
- · adjust the stitch width to suit the fabric
- · if stitches are visible from the right, adjust the guide on the presser foot with the screw
- after sewing about 10 cm (4"), check both sides of fabric and adjust width again if necessary



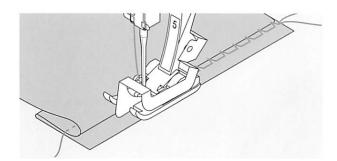



TIP

Even stitching

· hold fabric back lightly while sewing

Fine stitch width adjustment

 guide the folded edge evenly along the metal guide on the foot = even depth

Sewing on elastic/cord

Stitch: Universal stitch (only activa 131)
Stitch width: depending on width of elastic
Needle: 80

Thread: machine thread Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 or Embroidery foot no. 6

(optional)

Sewing on elastic

for gathering long lengths of fabric, frills and flounces in

fine fabrics


Preparation

· cut elastic to length required

Sewing

 sew over elastic needle must not pierce elastic

· after sewing, pull elastic to adjust

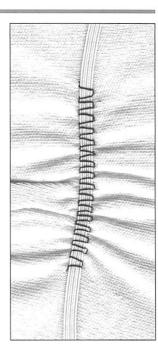



TIP

Secure the beginning and end of elastic

 sew a few straight stitches backward and forward to secure the elastic

Quick hem finish

- · for children's or doll's clothing
- · sew hem with elastic before sewing side seams

Sewing on shirring elastic/cord with Gathering stitch

}

Stitch: Gathering stitch (only activa 131 and 140PE)

Needle: 80

Thread: machine thread Feed-dog: sewing

Presser foot: Buttonhole foot no. 3

Shirring elastic/cord


for gathering long lengths of fabric

Preparation

- · cut elastic/cord double the length of the fabric
- · fold in half
- \cdot hook over the center prong on the buttonhole foot
- · take both ends under the foot to the back

Sewing

- · sew a few stitches
- · lift elastic/cord at the front and pull towards you
- · leave ends behind the presser foot
- · oversew cord
- · after sewing pull the cord to gather the fabric
- · stretch elastic while sewing
- · the tighter it is stretched, the tighter the gathers

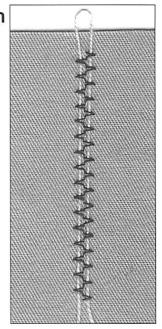



TIP

Securing beginning and end

· sew a few stitches with the feed-dog lowered

⁶ Sewing on wide elastic with Running stitch



Stitch: Running stitch
Stitch length: adjust to suit elastic

Needle: 80

Thread: machine thread

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Wide elastic


for finishing openings on sports wear and lingerie

Preparation

- · cut elastic to length required
- · divide opening and elastic into 4 equal sections and
- · pin elastic to opening, matching up markings

Sewing

- · as you sew, stretch the elastic to fit the opening
- · trim surplus fabric

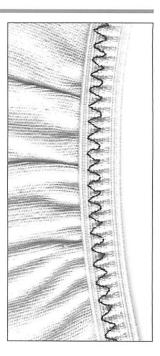









TIP

Gather the fabric edge first

 makes it easier to sew on elastic = elastic remains flat when sewing

Elastic is stretched

· reduce the presser foot pressure to suit fabric and elastic


Everything you need to know about buttonholes

Thread tension

- · thread the bobbin thread through the finger of the bobbin case
- · the bobbin tension is a little tighter
- · this gives the beads on the right side of the fabric a slightly rounded appearance
- · the buttonhole looks more attractive
- · gimp reinforces buttonholes and enhances their appearance (page 18)





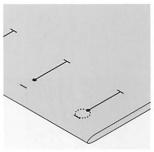

Mark the length of manual buttonholes

· mark the buttonhole length in the appropriate position

Mark the length of automatic buttonholes

- · mark the length of just one buttonhole
- · after sewing the first buttonhole, the length for all subsequent buttonholes is automatically programmed
- mark only the beginning of all subsequent buttonholes

Mark the length of keyhole buttonholes

- · mark the bead length only
- · the correct length eye will be added when the buttonhole is sewn

Test sewing

- · always test sew on the fabric and stabilizer you intend
- · select the buttonhole type you intend to use
- · sew the buttonhole in the same direction on the fabric (with or against the grain)
- · cut the buttonhole open
- · push the button through and adjust the buttonhole length if necessary

Corrections

To adjust the bead width:

· alter the stitch width

Altering the stitch length:

- · any alterations to the stitch length affect both beads (denser or less dense)
- · always reprogram the buttonhole after any changes to the stitch length

Balance

- · any alterations to the balance affect both beads (stitch counter buttonholes)
- · if you alter the bead density with balance, delete the programmed buttonhole with the clr/del button and reprogramme the buttonhole with the new balance
- any balance alterations to the 6-step manual and auto length buttonholes affects both beads identically because they are sewn in the same direction



2. Denser bead

1. Finer bead

1. Denser bead


2. Finer bead

When all buttonholes have been sewn, return balance to the normal setting


18 Standard buttonholes with gimp


Gimp

- · gimp cord reinforces buttonholes and enhances their appearance
- the loop of the cord should be at the end of the buttonhole most subject to wear cord loop = where button is sewn on
- · position the work accordingly
- gimp cord is particularly recommended for standard and stretch buttonholes
- · Ideal cords:
- · Perle yarn No. 8
- · strong hand sewing thread
- · fine crochet yarn

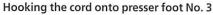


- · insert the needle at the beginning of the buttonhole
- · raise the presser foot
- · hook the cord over the centre pin on the front of the foot

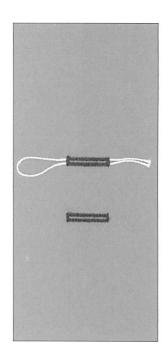

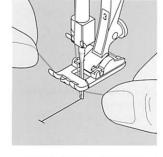

Hooking the cord in presser foot No. 3 and sewing

- pull both ends of the cord in the grooves of the foot to the back
- · lower the presser foot
- · sew the buttonhole
- · do not hold the cord tightly

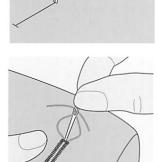

Securing the cord


- · pull the cord through the buttonhole
- · pull cords through to back of fabric
- · knot or secure with stitches





Cutting buttonholes open

using the seam ripper, cut from the ends towards the middle

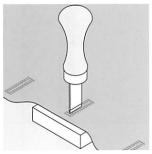

Buttonhole cutter and block (special accessory)

- · place the fabric on the wood
- · place the cutter in the centre of the buttonhole
- · press down on the cutter with your hand or a hammer

Edging knits with shirring elastic

Stitch: Zig-zag
Stitch width: approx. 5
Stitch length: 1–1.5
Needle: 80/70
Thread: darning thread

Feed-dog: sewing


Presser foot: Reverse pattern foot no. 1

Edges in knits with shirring elastic

prevents openings from stretching and helps retain their shape

Sewing

- guide double length of shirring elastic along the edge of the fabric
- · stretch the elastic lightly
- · oversew with zig-zag

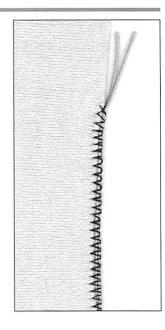



TIP

Pulling in and reinforcing openings

- · do not sew on the elastic, only over it
- \cdot adjust elastic afterwards to regain the correct shape and size

Stretch fabrics stretch while sewing

· reduce the presser foot pressure to suit the fabric



Patches on woven fabrics

Stitch: Running stitch/

Honeycomb (only activa 131 and 140PE)

Needle: 80/70

Thread: darning thread

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1

Disguises worn or torn areas


in medium to heavy weight fabrics, especially clothing

Preparation

- · do not cut damaged area
- · pin and baste patch to right side

Sewing

- sew over edges with Honeycomb or Running stitch Honeycomb stitches should be on the patch – needle pierces just inside the outer edge
- sew a row of straight stitches on the inside edge of the Honeycomb stitch – this makes it easier to cut away the damaged fabric
- · cut away damaged fabric

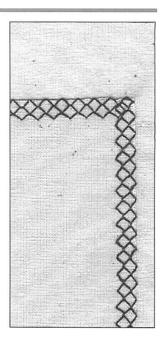

Patches on knits and jersey

Stitch: Jersey stitch (only activa 131)

Needle: **80/70**Thread: **darning thread**

Feed-dog: sewing
Presser foot: Reverse pattern foot no. 1

Disguises worn or damaged areas


particularly for stretchy fabrics, especially underwear

Preparation

- · do not cut damaged area
- · round off patch to retain elasticity
- · pin and baste to right side

Sewing

- · sew over edge
- · sew a second row inside the first if necessary
- · cut away damaged area

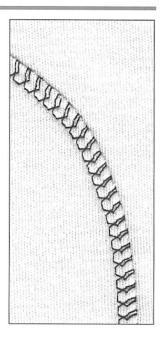



TIP

Knits

· use a new needle to prevent damaging the loops

Sewing stretch fabrics

· if necessary use a stretch needle (130/705 H-S) = needle slides between the fibers

Fabric stretches and waves

· reduce presser foot pressure to suit the fabric

Darning and mending tears with Running stitch

5

Stitch: Running stitch
Needle: 80/70

Thread: darning thread Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 permanent reverse sewing

Quick mends


for tears and worn areas on all types of fabric

Preparation

· for tears use a fine backing fabric

Sewing


- · tears: sew 3–5 rows of Running stitch
- · worn areas: sew as many rows as necessary next to one another
- · overlap each row slightly over the previous one

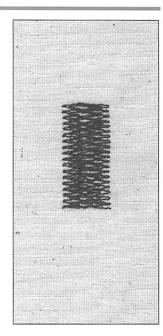

Method

flat areas


- · sew forward
- · insert needle
- · turn work
- · sew forward again

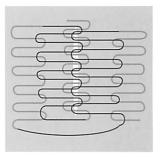



tubular areas (trousers, sleeves)

- · sew first row forward
- · select continuous reverse sewing function
- · sew second row in reverse
- · delete function
- · sew next row forward again
- · repeat as necessary

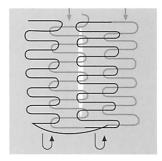



TIP

Backing for tears

· instead of fine fabric, use a piece of gauze or soft interlining

Darning program



Stitch: Da Needle: 80

Darning Program 80/70

Thread: darning thread Feed-dog: sewing

Presser foot: Reverse Pattern foot no. 1

Quick darning of holes or worn areas

· replaces threads with the grain in all fabrics



Darning with Reverse Pattern foot no. 1

- · select continuous reverse/stitch counter buttonhole selector
- · insert the needle in the top left of the worn area
- · sew the first vertical row
- · press the quick reverse button at desired length
- · continue sewing, machine stops automatically


Large areas:

The darning area can be extended by moving the work under the foot.

Clear the programme by pressing the clr/del button.

Corrections

· if the darning becomes distorted, correct with Balance

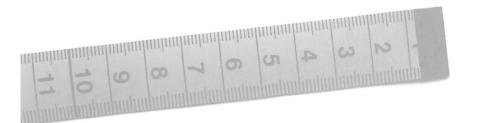




TIP

Reinforcemen

· use fine fabric or interlining as a backing

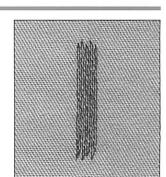

Darning

Stitch: Straight stitch
Needle: 80/70
Thread: darning thread
Feed-dog: darning (lowered)

Presser foot: Darning foot no. 9 (optional)

Darning holes or worn areas

replaces both lengthways and horizontal threads in all fabrics

Preparation

- stretch fabric into darning ring*
- · prevents puckering
- · if possible, use the sewing table

Sewing

- · move darning ring smoothly
- · work from left to right
- · move without using pressure


Method


- sew first row
- · turn work by 90°
- · sew over the first row not too close for a soft finish
- · turn work by 90° again
- · complete darning loosely and in same direction as first row
- in tubular items
 first step in a horizontal direction
 second and third steps in lengthways direction
- when you have mastered the technique work the rows in irregular lengths so that the ends are lost in the fabric


Important


- · change direction in curves (no points)
- = prevents holes
- = prevents thread breakage
- · move as if writing L or M
- do not sew in circles = these do not mimic fabric construction




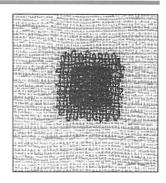

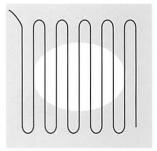

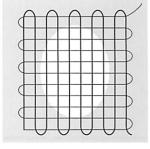

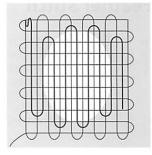

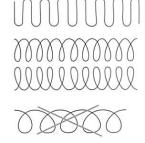



TIP

Thread breaks

· uneven movement of darning ring

Stitch formation is not good, thread lies on top

· ring moved too quickly

Knots on the underside

· ring moved too slowly

Stipple Stitching

Stitch: Stipple stitch

Needle:

Thread: machine thread

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1


Needle position: center

Preparation

- · prepare a "quilt sandwich" by placing a layer of batting between the quilt top and the backing fabric (fabric will be right sides out)
- · place the quilt sandwich under the needle and sew the stipple stitch as desired across the fabric

Sewing

 place the quilt sandwich under the needle and sew the stipple stitch as desired across the fabric.

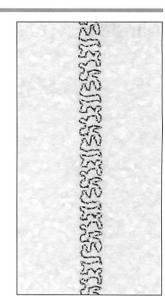



TIP

· to give a more random look to the stitching, adjust the presser foot pressure control to a low (light) setting, lengthen and/or widen the stitch, and move the fabric from side-to-side as the machine sews

Feather Stitch



Stitch: Feather stitch

Needle:

80

Thread: machine thread

Feed-dog:

sewing

Presser foot: Reverse pattern foot no. 1 or Open

Embroidery Foot no. 20


Needle position: center

> Use this delicate embroidery stitch to embellish fabric, or to cover patchwork seams.

Preparation

· piece patchwork shapes as desired

- · place the fabric under the needle and position it so the center portion of the stitch will fall "in-the-ditch" of the seam
- · stitch, embellishing seams as desired

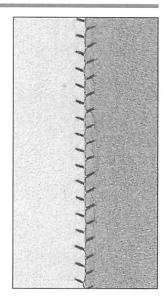



TIP

· for variety, increase or decrease the length and width of the pre-programmed feather stitch

Hand-Look Quilt Stitch

Stitch: Hand-look quilt stitch

80 Quilting, Jeans, Sharp, or Microtex Needle:

0.044 monofilament Needle thread: Bobbin thread: 40 or 30 weight cotton

Feed-dog: sewing

Presser foot: Reverse pattern foot no. 1 Needle position: as desired

Needle Tension: tighten to 7-8 for cotton thread

> Balance: turn counterclockwise to adjust as desired

Preparation

· prepare a "quilt sandwich" by placing a layer of batting between the quilt top and the backing fabric (fabric will be right sides out)

· pin or baste layers together

Sewing

- · place the guilt sandwich under the needle and sew the hand-look quilt stitch as desired across the fabric
- · the bobbin thread should pull to the surface of the fabric and give the appearance of a hand-sewn running





TIP

- · use the supplementary thread guide and/or an accessory thread stand for the monofilament thread, if needed, for optimal feeding into the machine
- · maintain even, moderate speed for best results

Blanket Stitch Applique

Stitch: Single Blanket stitch or **Double Blanket stitch**

Needle:

Thread: machine thread

Feed-dog: sewing

Reverse pattern foot no. 1 or Open Presser foot:

Embroidery Foot no. 20

Needle position: center

Preparation

- · cut desired applique shapes
- · fuse or baste as desired to a background fabric

Sewing

- · place the fabric under the needle and position it so the wide portion of the stitch will form on the applique and the straight portion will fall just outside of it on the background fabric
- · stitch around entire applique shape



TIP

· for a hand-stitched look, increase the stitch length and width when appliqueing heavy fabrics such as felt, flannel, and Ultra Suede®

²⁶ Index

 keyhole standard standard with gimp Hand-Look Quilt Stitch Hems with practical stitches Self-facing with honeycomb stitch honeycomb stitch Sewing knits Standard buttonhole with gimp Standard buttonhole with g	
keyhole 17 H Securing stitch 3 zig-zag stitch • standard with gimp 18 Hand-Look Quilt Stitch Hems with practical stitches 25 Self-facing with honeycomb stitch 15 Z C Sewing knits 11-12 Zig-zag seam Zig-zag seam Couching 15 K Standard buttonhole with gimp 17 Zig-zag stitch Couching 15 K Standard buttonhole with gimp Zig-zag stitch Keyhole buttonhole buttonhole 17 Stipple Stitching 24 D Knits 11 Straight stitch 2	9
standard with gimp 18 Hand-Look Quilt Stitch stitches 15 Hems with practical stitches 15 Sewing knits 11–12 Shirring elastic 15 Standard buttonhole Standard buttonhole with gimp 18 Keyhole buttonhole Knits 11 Straight stitch 24 Straight stitch 25 Seigh-facing with honeycomb stitch 15 Zeswing knits 11–12 Shirring elastic 15 Zig-zag seam Standard buttonhole with gimp 18 Keyhole buttonhole Knits 17 Stipple Stitching 24 Straight stitch 2	10
Standard with gimp 18 Hand-Look Quilt Stitch Hems with practical stitches 10 Sewing knits 11–12 Sewing knits 11–12 Shirring elastic 15 Zig-zag seam Standard buttonhole 17 Zig-zag stitch Standard buttonhole with gimp 18 Keyhole buttonhole Minds Straight stitching 24 Knits 11 Straight stitch 2	
Hems with practical stitches 10 Sewing knits 11–12 Shirring elastic 15 Zig-zag seam Standard buttonhole 17 Zig-zag stitch Zippers with gimp 18 Keyhole buttonhole Knits 11 Straight stitch 2	10
Stitches 10 Sewing knits 11–12 Shirring elastic 15 Zig-zag seam Standard buttonhole 17 Zig-zag stitch Standard buttonhole 2ippers with gimp 18 Keyhole buttonhole 5 Knits 11 Straight stitch 2	
C Shirring elastic 15 Zig-zag seam Standard buttonhole 17 Zig-zag stitch Standard buttonhole 2ig-zag stitch Standard buttonhole with gimp 18 Keyhole buttonhole Mits 11 Straight stitch 2	
Couching 15 K Standard buttonhole Standard buttonhole with gimp 18 Keyhole buttonhole buttonhole Mits Standard buttonhole with gimp 18 Stipple Stitching 24 Straight stitch 2	7
Couching 15 K Standard buttonhole Zippers with gimp 18 Keyhole buttonhole 17 Stipple Stitching 24 D Knits 11 Straight stitch 2	5
with gimp 18 Keyhole buttonhole 17 Stipple Stitching 24 D Knits 11 Straight stitch 2	13
Keyhole buttonhole 17 Stipple Stitching 24 D Knits 11 Straight stitch 2	
D Knits 11 Straight stitch 2	
Super stretch seam 8	
Darning with running	
stitch 20 M	
Darning 22 T	
Darning Programme 23 Mending tears 19	
Decorative stitches 6 Triple straight stitch	
Double overlock seam 9 seam 8	
<u>P</u>	
F Detailing 40	
E Patching 19 Practical stitch seams 7	
Edge stitching 4	
Elastic 15	
Elastic, sewing on 16	

